SAMSUNG

YP-910 Player
User Manual

AH68-01380D (Rev 0.0)

Contents

Safety Guidelines

Safety Instructions 4
Battery Charger Safety 6

Introduction

Charging the battery 7
Samsung Player Feature Overview....9
Components....11
Location of Controls....12
Location of Controls (Remote Control) 13

Installation and Setup

Connecting yepp to PC 14
Manually Installing the USB Driver 18
Disconnecting the USB cable 21

Using yepp station with Your Player

Using yepp station....22
Transferring Music to Your yepp 27
- Adding Music Files....28
- Transferring Music Files....29
- Creating a Playlist 30

Using Your Player

Playing Music....31
Adjusting Volume....32
Searching Within Music Files 33
Hold Feature 35
Menu Mode 36
Browsing Your Music 37
- Searching for and Adding Music Files 37
- Selecting a Playlist....39

Playing FM Radio 40
Playing Music Via FM Transmission 43
Recording From FM Radio 45
Recording MP3s 46
Uploading Recorded Files to a PC 48

Additional Features

Shuffle and Repeat Playback 50
Equalizer Settings 51
Recording Settings 52
Screen Settings 53
Language Setting....55
Restoring Default Settings....56
Player Information 57

Customer Support

Troubleshooting....58
Specifications....60

Safety Guidelines
Safety Instructions

Please read and understand all the instructions to avoid injury to yourself and damage to the device

Do not expose to extreme temperatures (above 95°F or below 23°F). Do not expose to moisture.	Do not apply excessive pressure to the device. Do not drop the player.	Do not let any foreign matter spill into the device.
Do not place heavy objects on top of the device. 	Do not expose to chemicals such as benzene and thinners.	Do not expose to direct sunlight or heat sources.
Do not store in dusty areas.	Do not try to disassemble and repair the device yourself.	Do not use the unit near any appliance that generates a strong magnetic field.

Earphones

Follow Traffic Safety Instructions

- Do not use earphones while driving an automobile or riding a bicycle.
- It is not safe to listen at high volume while walking down the street, especially while crossing at intersections.

Protect your ears

- Do not turn the volume too high.
  Doctors warn against prolonged exposure to high volume.
- If you have ringing in your ears, turn the volume down or discontinue listening.

Ambient Operating Conditions

- Ambient temperature: 5°C ~ 35°C (41°F ~ 95°F)
  Humidity : 10 ~ 75%

Environmental Information

- Follow local guidelines for waste disposal when discarding packages, batteries, and old electronic appliances.
- Your player is packaged with cardboard, polyethylene, etc. and does not use any unnecessary materials

Battery Charger Safety

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN

The uninsulated parts inside the charger could cause electric shock.
For your safety, do not open the case of the charger.

Read this User Manual to prevent any problems that may occur while using the charger.

Warning

- Use the charger away from water sources to avoid fire or electric shock.

Caution

- Use the charger only with a power outlet that matches the shape of the converter's plug to avoid electric shock.
- Make sure that the charger's plug is inserted all the way into the outlet.

Introduction
Charging the Battery

A charger is supplied with your Samsung Player.

Plug the charger into a wall outlet.

- Red light indicates that the battery is being charged.
- Green light indicates that the battery is fully charged after charging.
- If the red light starts to blink, please try again to connect the charger properly.

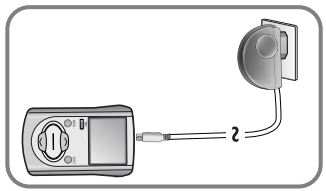

Caution

- Do not charge longer than the specified charge time to avoid risk of fire.
- Do not plug several devices into the same outlet.
- Do not use a rechargeable battery or charger that is defective.
- When using the rechargeable battery for the first time or after several months of non-use, fully charge it first.
- Do not charge the rechargeable battery for more than 12 hours.
- Overcharging or overdischarging will reduce the battery life.
- The rechargeable battery is a consumable item and its capacity will decrease gradually.
- To prolong the life of your battery, use the fully charged battery until it is completely discharged, and then fully charge it again before use. If you charge the battery that is not completely drained, the battery operating time will decrease. In this case, fully cycle (fully charge and then fully discharge) the battery several times.
- Do not let metallic objects, such as necklaces or coins, come into contact with the terminals (metallic parts) of the charger and the built-in rechargeable battery.
  A fire or electric shock may result.

The rechargeable batteries drain quickly when you download or upload recorded files. Always use the charger when transferring files.

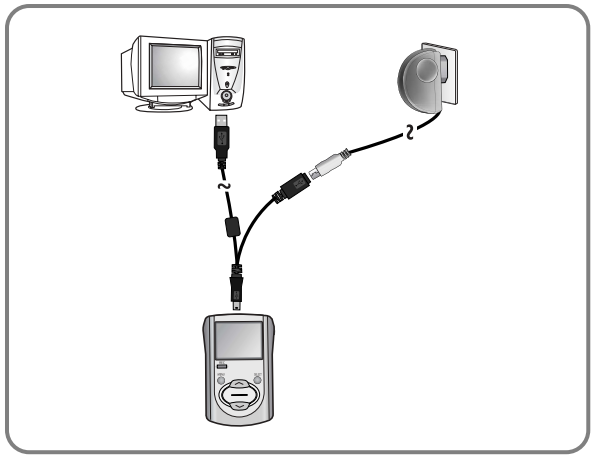

Samsung Player Feature Overview

Mass Storage Hard Disk

You can use the built-in 20GB hard drive to store your entire music library, plus use it as an external drive on your PC to store other data files.

MP3 Recording Capability

You can convert music from CDs, cassettes, and radio into MP3 files without a PC.

Built-in Rechargeable Li-Polymer Battery

The built-in rechargeable lithium battery provides up to 10 hours of play time.

MP3 & WMA Playback

Your Player supports playback of both MP3 and WMA.

High Speed Transfer via USB

Maximum transfer speed of 120 Mbps.

High-Fidelity Sound

The Player has a built-in equalizer to adjust sound to your preference.

Components

Player

Remote Control

Earphones

USB Cable

Line-In Cable

User Manual

Charger


Installation CD

Carrying Case


FM Transmission Antenna

- Car-lighter adapter is sold separately.
- The appearance of the accessories shown is subject to change for product improvement without prior notice.

Location of Controls

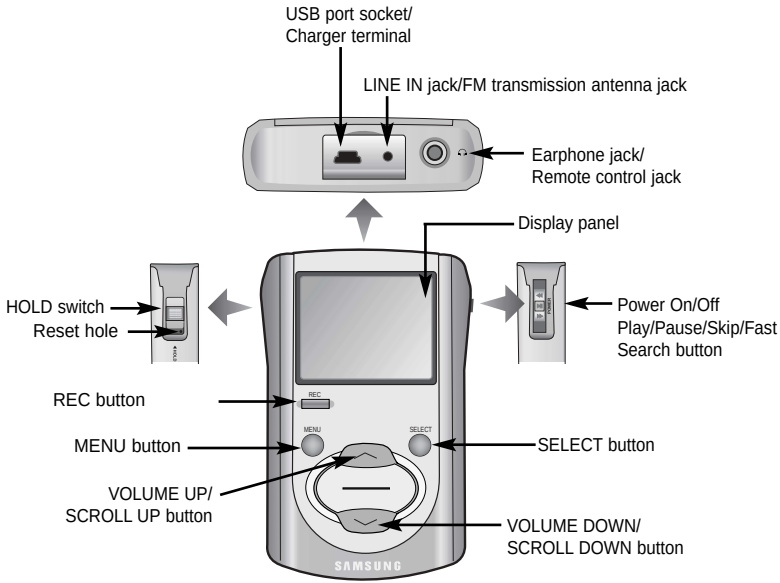

Note

Reset the player by pressing the reset hole using a pointed object such as a safety clip.

Location of Controls (Remote Control)

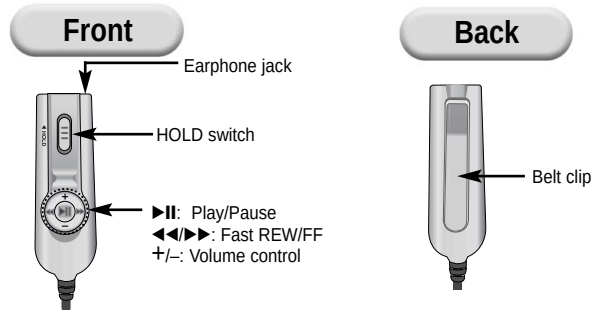

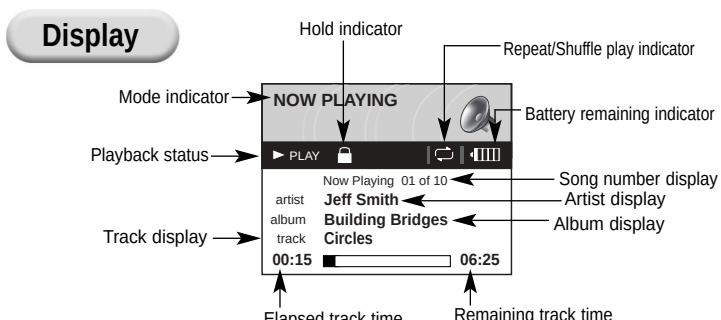

Installation and Setup

Connecting yepp to PC

Be sure to install yepp station before you connect the player to your PC.
If the "Add New Hardware Wizard" appears, click **[Cancel]** and then install yepp station.

Installing software

1 Insert the Installation CD into CD-ROM drive.
The picture shown below appears.
Select **[yepp station Install]**.

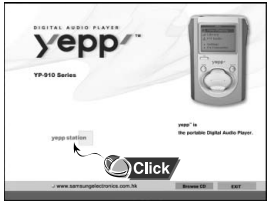

System Requirements.

Your PC system must meet the following requirements:

- Pentium 133MHz or greater
- Windows 98 SE/ME/2000/XP
- 50MB of available hard disk space
- CD-ROM drive
  (double speed or greater)
- USB port (2.0/1.1) supported
- VGA graphic

Note

- If your PC supports USB 2.0, you can use the player at a faster speed.

2 Click **[Next]** in the series of windows that appear.

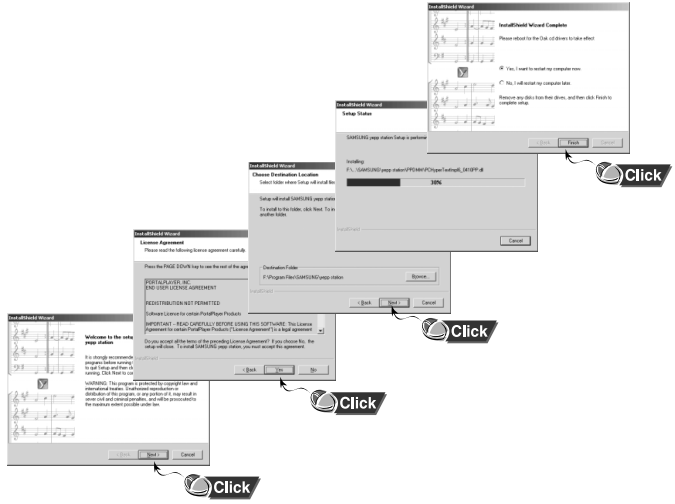

Continued...

Connecting yepp to PC with USB cable

3 Charge the battery on the player, and then press ▶II to turn on the power.

4 Connect one end of the USB cable to the USB port on your PC.

5 Open the player's upper door and connect the other end of the USB cable to the USB cable socket.

6 A message appears, indicating that a new device has been found, and the USB driver will be installed. If the USB driver does not install automatically, restart your PC and try again.

7 Once the USB driver is installed, "**SAMSUNG YP-910**" or "**USB Mass Storage Device**" appears in Device Manager.

Note

How to check USB driver

Windows 98:
Control Panel → System → Device Manager

Windows 2000 Professional:
Control Panel → System → Hardware → Device Manager

Windows XP Professional:
Control Panel → Performance and Maintenance → System → Hardware → Device Manager

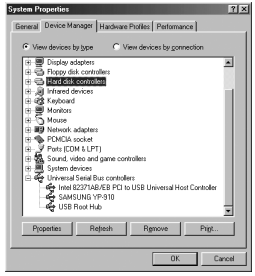

8 If the USB driver does not show as installed in Device Manager, refer to the section on "**Manually Installing the USB Driver**".

Manually Installing the USB Driver

If the USB driver has been installed successfully, skip to "Using yepp station".
Refer to the following procedure only if the USB driver is not installed automatically.

When an error occurs during installation of the USB driver

1 Check the device manager.
Windows 98,ME:
Control Panel → System → Device Manager
Windows 2000 Professional:
Control Panel → System → Hardware → Device Manager
Windows XP Professional:
Control Panel → System → Hardware → Device Manager

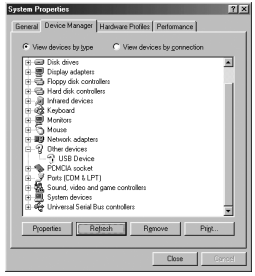

2 Check if there is a device listed with an exclamation point or a question mark (displayed as unknown device or USB device).

3 Double click on the device listed with an exclamation point or a question mark.

Note

- If you are using Windows 2000 and your version of Windows does not recognize the USB driver, please download and install the latest service pack from windowsupdate.microsoft.com
- The installation method may vary depending on the type of PC or operating system. Contact your PC dealer or service center for installation information.
- If errors occur continuously when you install the USB driver, reconnect the USB cable after rebooting your system.

4 After selecting the driver, click on **[Update Driver]**.

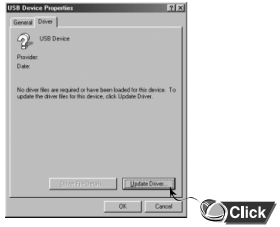

5 Select a compatible driver, click on **[Next]** to finish.

Update Device Driver Wizard
This wizard searches for updated drivers for:
USB Device
A device driver is a software program that makes a hardware device work.
Upgrading to a newer version of a device driver may improve the performance of your hardware device or add functionality.
< Back
Next >
Cancel
Click

Continued...

In Windows 98 SE

Click **[Next]** button in the series of windows that appear.

Insert the Installation CD-ROM into the CD-ROM drive, and then click [Browse].
Select the "**Drivers**" folder on the CD-ROM, and then click **[Next]**.

You must reboot your computer
to complete the installation.

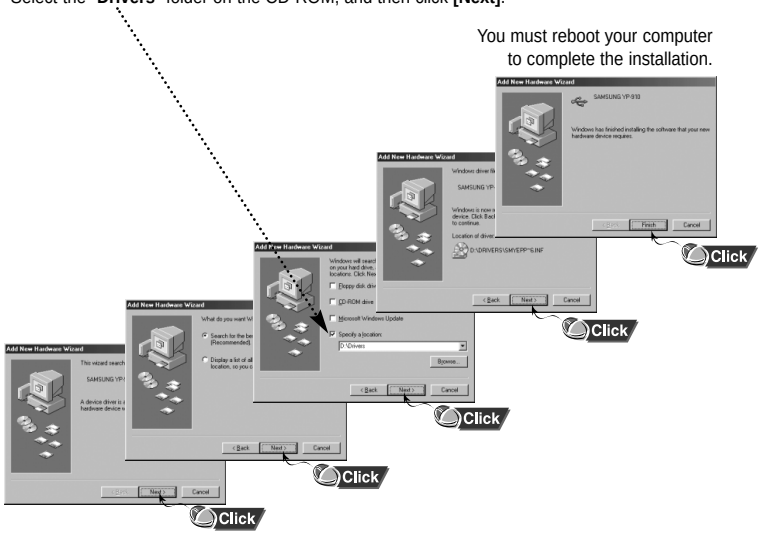

Disconnecting the USB cable

After completing the file transmission, you must disconnect the cable in the following way:

1 Double-click on the green arrow in the taskbar on the bottom right of the window. Disconnect the USB cable.

2 Select the USB device, and then press the **[Stop]** button.

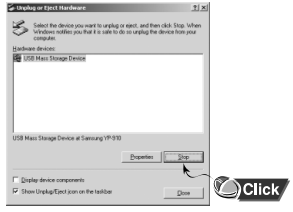

Using yepp station with Your Player

Using yepp station

The Source Window

- **My Library**
  - The storage contains information on the music clips in your PC, Audio CD, and yepp.
  - Using the music clips in My Library, you may build your own Playlist, or transfer to a writable CD, yepp.
- **CD Rom:** Contains the information on an Audio CD.
- **My Playlist:** List of the music clips selected to play, in the yepp station.
- **My yepp:** Displayed only when the yepp is connected, shows the information for the music clips in the yepp.
- **External Playlists:** Shows the external Playlists available for the yepp.

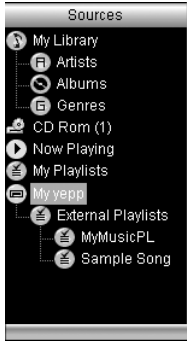

Note

When you click on each item, the information for the respective music file is shown.

Turn on the player and connect it to your PC.

Run yepp station.

- Select the desired Play mode.

- **Play** ( ): Plays the selected track.
- **Pause** ( ): Temporarily stops playback.
- **Stop** ( ): Stops playback.
- **Previous Track** ( ): Plays the previous track.
- **Next Track** ( ): Plays the next track.
- **Mute** ( ): Toggles Mute on or off.
- **Volume** ( ): Controls the volume level.
- **Shuffle** ( ): Plays songs randomly.
- **Repeat** ( ): Toggles among Repeat Once, Repeat All, and None.
- **Mode** ( ): Toggles between Mini mode and Full Screen mode.
- **EQ/FX** ( ): Allows you to select the desired Equalizer mode and Effect Mixer.
- **Search Bar** ( ): Allows you to quickly locate the specific section you want.

Note

- For detailed operation instructions, refer to Help in yepp station.

Continued...

Run yepp station.

● Click on the **HELP** button to select the desired item.

● **yepp station Help**: Provides detailed help information.

● **SAMSUNG Web Site**: Takes you to the Samsung website.

● **Gracenote Web Site**: Takes you to the Gracenote website.

● **Option**: You can set the yepp station as your default media player.

● **Recover yepp HDD**: Recovers yepp system files. (Only System Files will be recovered.)

● **Upgrade Firmware**: Allows you to upgrade the yepp player's operating system.

● **About**: Displays copyright and version information about yepp station.

Note

● For detailed operation instructions, refer to Help in yepp station.

● **When recovery of the yepp system is required:**
If the yepp has been formatted in Windows Explorer or the System folder of your yepp has been deleted, proceed with system recovery.

Run yepp station.

● Click on the Option button to select the desired item.

● **General**
When AUTO CD PLAY is selected, standard CDs will be played by yepp station.

● **File Types**
Select the checkbox to make yepp station the default player for MP3, WMA, CDA, and WAV files.

Note

● For detailed operation instructions, refer to Help in yepp station.

Continued...

Run yepp station.

● Select the desired additional function.

● **CREATE PLAYLIST** ( ): Allows you to create a playlist.

● **CREATE CD** ( ): Allows you to create your own music CDs.

● **ADD MUSIC** ( ): Allows you to add songs to My Library

● **ID3 TAG EDIT** ( ): Allows you to edit ID3 tags.

● **UPDATE MEDIA** ( ): Allows you to update the media library.

● **DEVICE CONTROL** ( ): Allows you to transfer music files between the yepp player and your PC.

● **RECORD** ( ): Allows you to convert common audio files into WMA files.

● **DELETE** ( ): Delete music clips listed in My Library by using the **Delete** button.

Note

● For detailed operation instructions, refer to Help in yepp station.

Transferring Music to Your yepp

To play back music files (mp3, wma) stored in your PC using your yepp, transfer those music files to your yepp, using the yepp station, by following these steps:

1. “Adding Music Files” → 2. “Transferring Music Files” →
3. “Creating a Playlist”

Caution

● yepp cannot play back music files copied into the yepp folder using Windows Explorer, instead of yepp station.

Continued...

Turn on the player and connect it to your PC.

1. Adding Music Files

1. Click ADD MUSIC ( ).
2. Click on the folder in which the music you want to add is located.
   - When you click OK, music files that can be played by yepp station will be displayed.
3. Click Delete to delete the music files you don't want to add, and then click ADD MUSIC.
   - The selected music files will be added to My Library.

Note

- To transfer music files to your yepp from the PC, “Adding Music Files” must be used.
- For detailed operation instructions, refer to Help in yepp station.

2. Transferring Music Files

1. Select the music files to be transferred in your Playlist or My Library.
2. Click DEVICE CONTROL ( ).
   - A Transfer window will appear.
3. Click TRANSFER.
   - The music files you have selected will be transferred to the yepp player.

Note

- Transferred music files are found in the folder System\MUSIC\ under the YEPP(E:) or YEPP(F:) drive in Windows Explorer.
- You also can transfer WAV files from the yepp player to yepp station in the same way as above.
- For detailed operation instructions, refer to Help in yepp station.

Continued...

3. Creating a Playlist

1. Select the music that you want to include in your playlist.
   - To select multiple music files, click on the desired songs while holding the Ctrl key.
   - Select music clips in “My yepp” for your Playlist.
2. Click CREATE PLAYLIST ( ).
   - A new playlist including selected music files will be created under External Playlists.
3. Position the cursor over "Untitled", and then right-click your mouse.

- Delete Playlist: Allows you to delete the playlist you created.
- Rename Playlist: Allows you to change the name of the playlist.
- Show ID3 TAG: Allows you to view ID3 tag information about the songs contained in the playlist.
- Play: Plays the music in the playlist.

Note

- For detailed operation instructions, refer to Help in yepp station.
- If no playlist exists, up to 10 music files are stored in the MyMusicPL folder automatically.

Using Your Player
Playing music

Make sure the device is fully charged and the earphones are connected.

Turning Power On and Off

Power On: Press and hold the ▶II button to turn on the power.

Power Off: While in Pause mode, press and hold the ▶II button to turn off the power.

Playing Music

Select Now Playing in the menu.
- Playback starts automatically.

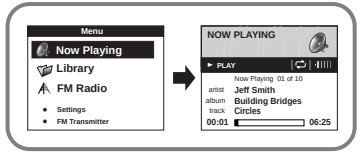

Pausing Music

Press the ▶II button to pause playback.
- While in Pause mode, briefly press ▶II again to resume playback.

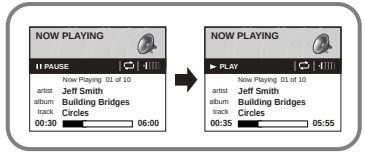

Adjusting Volume

Adjusting the Volume

Press the UP or DOWN VOLUME button to adjust the volume.

Note

- The volume can be adjusted in increments between 0 and 20.
- Press once to adjust the volume by one level. Press and hold to increase or decrease the volume in greater increments.

Searching Within Music Files

Searching for Specific Parts in PLAY Mode

- During playback, pull and hold the ◀◀ / ▶▶ to forward or reverse search the currently playing file.

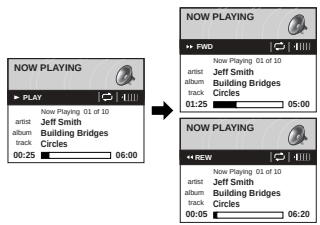

Note

- VBR (Variable Bit Rate) File:
  An MP3 file that has varying compression ratios.
- When playing a VBR file, even if you press ◀◀ within 5 seconds after the start of playback, the previous song may not be played.
- The actual play time and the time displayed on the main unit may differ for VBR files.

Continued...

Searching for Music Files in PLAY Mode.

- During playback, briefly pull the ▶▶ to play the next track in the playlist.
- Briefly pull the ◀◀ to play the previous track in the playlist.
- Press and hold the SELECT button to display the current playlist. Use the SCROLL UP/DOWN buttons to find the song you want and press the ▶II to play it.

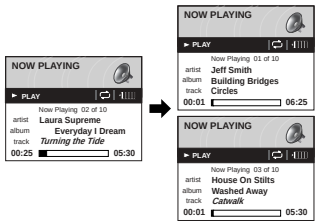

Searching for Music Files in PAUSE Mode.

- While in pause mode, pull the ◀◀ / ▶▶ to move to the previous or next track in the playlist and play it automatically.

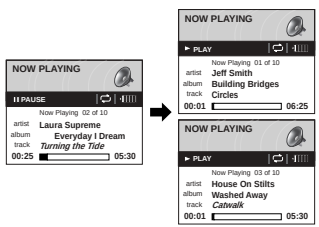

Hold Feature

Use the Hold feature to lock and disable all buttons. The Hold feature is useful to prevent your Player from being accidentally turned off or on, or to ensure uninterrupted playback.

Hold Function of the Main Unit

Activate on the main unit.

- All buttons on the main unit will be disabled, and only the buttons on the remote control can be used for input.
- When you activate the HOLD switch, a " " appears on the display.
- appears on the display.

Hold Function of the Remote Control

Activate on the remote control.

- All buttons on the remote control will be disabled, and only the buttons on the main unit can be used for input.

Note

- To turn on the power with the remote control while the main unit is in locked mode, press and hold the ▶II button on the remote control.

Menu Mode

Press the MENU button to switch to MENU mode.
Use the SCROLL UP/SCROLL DOWN buttons to select the menu item you want, and then briefly press the SELECT button.

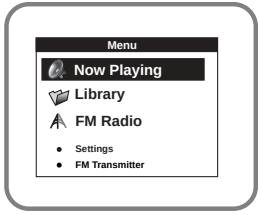

- **Now Playing**: Display the song currently playing.
- **Library**: Search and select music to play.
- **FM Radio**: Listen to FM radio
- **Settings**: Change the settings.
- **FM Transmitter**: Listen to your music by transmitting it wirelessly to another FM radio

Note

- In MENU mode, press the MENU button to exit from the submenu you are in.

Browsing Your Music

In the MENU, use the SCROLL UP/SCROLL DOWN buttons to select the Library, and press the SELECT button.

Searching for and Selecting Music Files

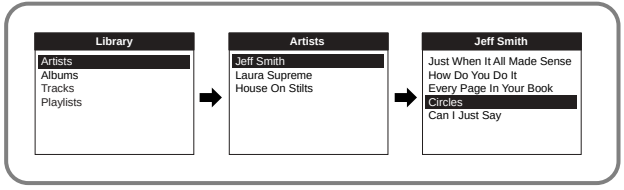

- **Artists**: Shows the artist name from the ID3 tag information stored in the music file.
  - Press the ▶II button on the desired artist name.
    All song titles corresponding to the artist name will be played.
  - If you select an artist's name, song titles that correspond to that artist name will be displayed.
    You can use the SCROLL UP/DOWN buttons to move, and then press the SELECT button to play the selected song.

Continued...

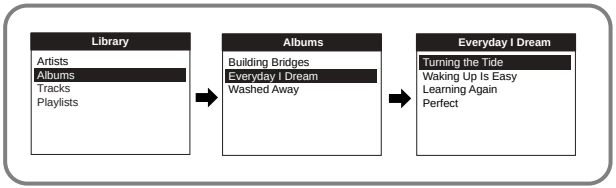

- **Albums**: Shows the album title from the ID3 tag information stored in the music file.
  - Press the ▶II button on the desire ablum name.
    All song titles corresponding to the album name will be played.
  - If you select an album name, song titles corresponding to that album will be displayed.
    You can use the SCROLL UP/DOWN buttons to choose a song, and then press the SELECT button to play the selected song.

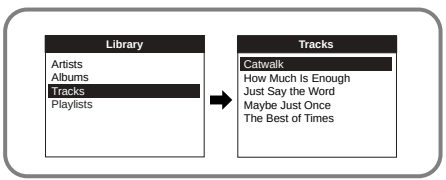

- **Tracks**: Shows the song title from the ID3 tag information stored in the music file.
  - You can use the SCROLL UP/DOWN buttons to move,
    and then press the SELECT button to play the selected song.
  - To play all the recently-transferred tracks on your Player, hightlight the
    Tracks menu item in the Library and press the ▶II button.

Selecting a Playlist

1 In the Library, use the SCROLL UP/SCROLL DOWN buttons to select Playlists, and then press the SELECT button.

2 Select the playlist that you want to play, and then press the SELECT button.
- The selected playlist will be played.

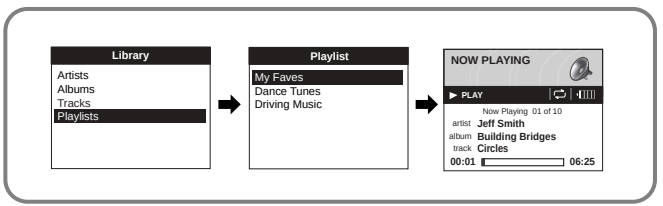

Playing FM Radio

Switching to FM Radio Mode

Press the MENU button.
Select the FM Radio in the main menu and then press the SELECT button.

Note

- Pressing the ▶II, button will switch between manual tuning mode and preset playback mode.

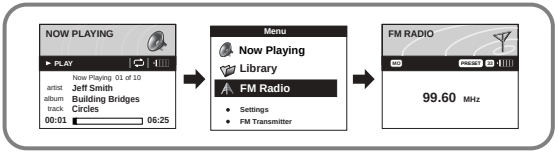

Manually Tuning Stations

Use the ◀◀ / ▶▶ button to search for stations and tune the radio.

Presetting FM Stations

1 When you have tuned a station you want to store in memory as a preset, press and hold the SELECT button. The “PRESET” icon will blink.

2 Pull the ◀◀ / ▶▶ button to select the preset number to which you want to store the station.

3 Press the ▶II button to store the selected station.
If you decide not to store the station, press the SELECT button again to cancel.

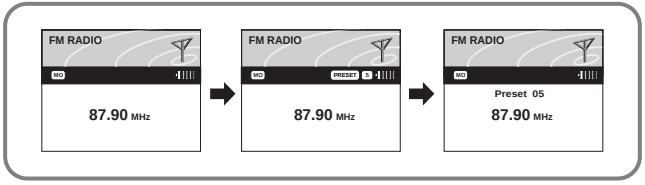

Note

- You can preset up to 40 stations.
- You can preset a new station into a location that already has a station stored.
- Press the ▶II button to switch between manual tuning mode and preset playback mode.

Continued...

Playing Preset FM Stations

1 Press the ▶II button so that “PRESET” appears on the display panel.

2 Use the ◀◀ / ▶▶ to search for the preset station you want to listen to.

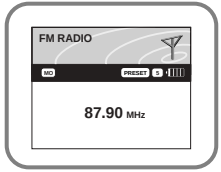

Deleting Preset FM Stations

1 Press the ▶II button so that “PRESET” appears on the display panel.

2 Use the ◀◀ / ▶▶ to search for the preset station you want to delete.

3 To delete a station, press and hold the SELECT button. The selected station will be deleted and the stations with preset numbers greater than the deleted one will be renumbered accordingly.

Playing Music Via FM Transmission

This feature allows you to play music stored on your player through your car radio using FM transmission.

Connecting the FM Transmission Antenna

Plug the FM transmission antenna into the FM transmission antenna jack.

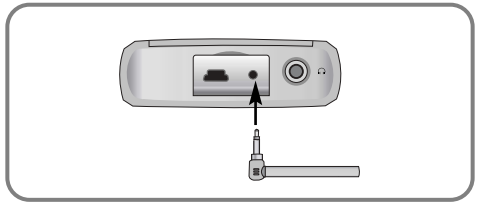

Note

- You will need to adjust the volume level from your external audio device or FM radio because the volume level of transmission in FM Transmission mode is set to a fixed level.

Continued...

Selecting the FM Transmission Frequency

1 Press the MENU button to switch to Menu mode, use the SCROLL UP/SCROLL DOWN buttons to select FM Transmitter, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to set the transmission frequency you want.

- Press the SELECT button to store the selected frequency.

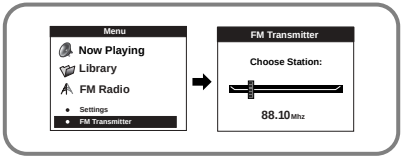

3 Set the external audio device's FM frequency to the transmission frequency and play a song. You will now be able to listen to music on your player from the FM radio on your car stereo.

Recording From FM Radio

1 Press the REC button while listening to FM radio.

- The current FM broadcast will be recorded into an MP3 file.

2 Press the REC button again.

- Recording stops and the file is created.
- Files are recorded and renamed M0001, M0002, and so on.
- MP3 files are automatically added to your Library.

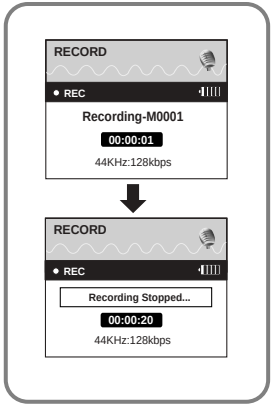

Note

- If no sound is heard while recording, check if the monitor volume in the recording setting menu is set to "Mute".

Recording MP3s

Your Player can be to used to record directly from any external audio source such as a CD player, cassette player, home stereo or radio.

1 While in Music mode, use the Line-In cable to connect the main unit's LINE IN jack and the LINE OUT jack of your external audio device.

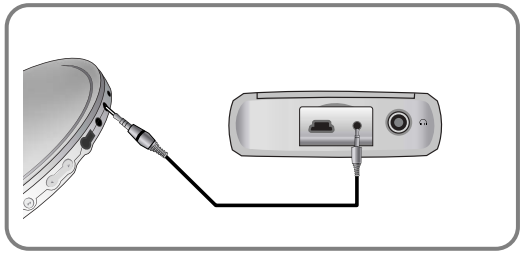

Note

- Before you begin recording, verify that the battery is fully charged, otherwise your recording may not complete successfully.
- Available recording time is displayed at the center right of the unit when recording starts. If there is no remaining capacity, recording stops automatically.

2 Press the REC button to start recording.

3 Press the REC button again stop recording. A new MP3 file will be created.

- Files are recorded and renamed M0001.mp3, M0002.mp3, and so on.
- A recorded MP3 file is automatically added to the current playlist.

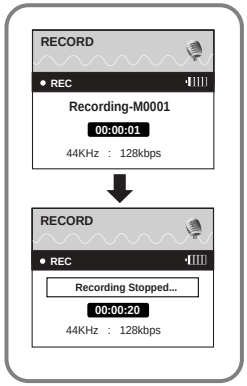

Note

- Set the volume of the externel audio device to an appropriate level before you start recording. If the volume level is set too high, the sound quality of the recorded file may be poor.

Uploading Recorded Files to a PC

Changing the "Hidden files and folders" option

In order to upload recorded files to a PC, you must first change the "Hidden files and folders" option on the View tab in the Folder Options.

1 In Windows Explorer, click [Folder Options] on the [Tools] menu.

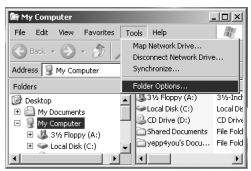

2 Choose the [View tab].

3 Check the item [Show hidden files and folders].

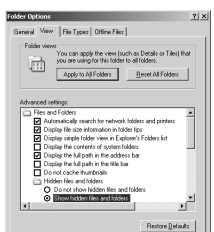
Folder Options
General View File Types Offline Files
Folder views
You can apply the view (such as Details or Tiles) that you are using for this folder to all folders.
Apply to All Folders
Reset All Folders
Advanced settings:
Files and Folders
Automatically search for network folders and printers
Display file size information in folder tips
Display simple folder view in Explorer's Folders list
Display the contents of system folders
Display the full path in the address bar
Display the full path in the title bar
Do not cache thumbnails
Hidden files and folders
Do not show hidden files and folders
Show hidden files and folders
Restore Defaults

Uploading Recorded Files

1 In Windows Explorer, select the drive indicated by "YP-910", and then click the System and music folders in order.

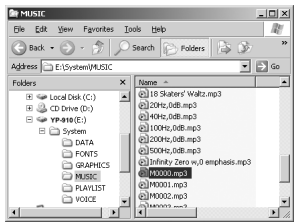

2 Drag and drop the recorded file (M✻✻✻.mp3) you want to upload to the PC onto the folder where you want it stored.

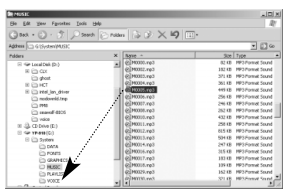

Caution

Never delete or modify any folders or files in the YP-910 system folder.

Additional Features
Shuffle and Repeat Playback

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Repeat.

3 Press the SELECT button until the desired mode appears.
- Select the desired mode, and then press the MENU button to go to the main menu.

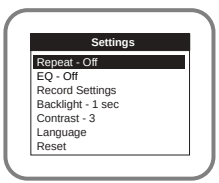

- **Off**: Select this to listen to songs in the current playlist one at a time in the given order.
- **Shuffle**: Select this to play all stored tracks in random order.
- **One**: Select this to repeatedly play just one track.
- **All**: Select this to repeatedly play all tracks in the current playlist.

Equalizer Settings

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select EQ.

3 Press the SELECT button until the desired mode appears.
- Select the desired mode, and then press the MENU button to go to the main menu.

Off → Rock → Pop → Classical → Jazz → Bass Boost

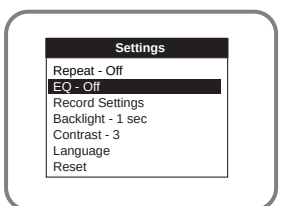

Recording Settings

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Record Settings, and the press the SELECT button.

3 Use the SCROLL UP/SCROLL DOWN buttons to select Sampling Rate, Bit Rate, and Input Level, and then briefly press the SELECT button to make the desired recording setting.

- Complete the desired setting, and then press the MENU button to go to the main menu.
  - **Sampling Rate**: Each time the SELECT button is pressed, the selection toggles between 32KHz and 44KHz.
  - **Bit Rate**: Each time the SELECT button is pressed, the selection changes as follows: 96 → 128 → 160Kbps.
  - **Monitor Volume**: Each time the SELECT button is pressed, the selection toggles between On and Mute.

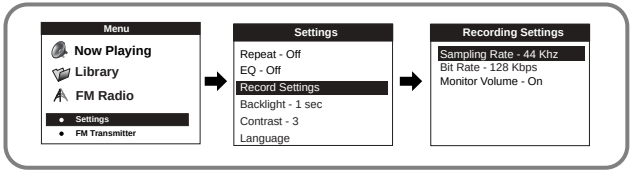

Screen Settings

Backlight

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Backlight.

3 Press the SELECT button until the desired Backlight On-Time appears.

- The setting range of Backlight-On Time is 0 to 9 seconds.

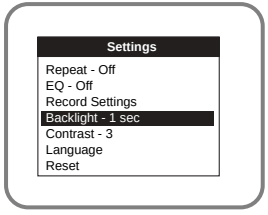

Continued...

Contrast

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Contrast.

3 Press the SELECT button until the desired screen contrast appears.

- The setting range of the contrast, which adjusts the contrast of the screen, is 0 to 7.

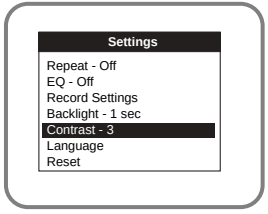

Language Settings

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Language, and then press the SELECT button.

3 Use the SCROLL UP/SCROLL DOWN buttons to select the desired file language from among nine language, and then press the SELECT button.

- Select the desired language, and then press the MENU button to go to the main menu.

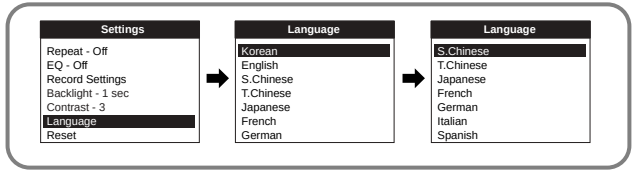

Restoring Default Settings

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select Reset, and then press the SELECT button.

- If you select Reset, all selected settings will be restored to the default setting.

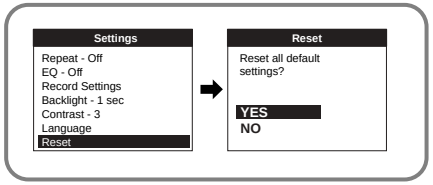

Volume = 9
Repeat = Off
EQ = Off
Backlight = 1sec
Contrast = 3

Default Settings

Player Information

About

1 In the Menu, use the SCROLL UP/SCROLL DOWN buttons to select Settings, and then press the SELECT button.

2 Use the SCROLL UP/SCROLL DOWN buttons to select About, and then press the SELECT button.

- If you select About, you can check the total number of songs stored, total capacity, available capacity, and version information.

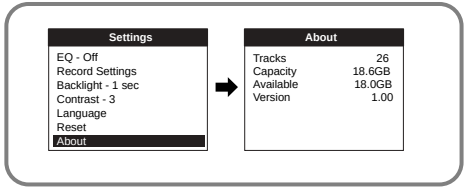

Customer Support
Troubleshooting

The player doesn't work. There is nothing showing on the display panel.
- Reset the Player
- Check the battery's power level.
- Make sure the Hold switch is in the off position.

There is no sound even if I press the Play button in Music mode.
- Check if there are MP3 or WMA files on the player.
- Non-playable file formats (e.g. MPEG1 LAYER 1 file) cannot be played. Delete the file from your PC before using the player.

I cannot download files.
- Check the battery's power level.
- Check if the driver is installed correctly on your PC. Reinstall the software from the installation CD.
- Check the USB connection between the player and your PC.
- Check if there is the “unplug/eject” or “Safely Remove Hardware” icon located in your icon tray at the bottom of your screen.

The backlight does not turn on.
- Check the backlight setting.
- The player is designed to turn off the backlight automatically for longer operating time when the battery's residual voltage is low.

The buttons on the player do not respond.
- Check if the Hold switch has been activated.
- Check if the USB cable is connected. Buttons do not work if the USB cable is connected.

The playback time display during playback does not seem right.
- Check if you are not playing a VBR (Variable Bit Rate) file. VBR files are only partially supported.

The LCD window is too dark.
- Check the screen brightness control.

During playback, some unknown characters are displayed on the display panel.
- Change the language setting to the correct language in the MENU.

A "/Noartist/Noalbum" file path appears on the playback screen in place of the selected music file's song title.
- There is no ID3 tag information for the music file. Edit the song title, artist, and album information of the song.

It takes a long time when I search songs by Song Title, Artist, or Album.
- If there are many music files on your hard disk, it may take longer to read them .

Specifications

Model	YP-910
Processor	90MIPS RISC
Internal Memory Capacity	20GB
Built-in Rechargeable Battery Capacity	1300mAh
Voltage	3.7V (Li-Polymer Rechargeable Battery)
Playing time	Maximum Operating Time: 10 hours
Dimensions/Weight	64.6 X 106.5 X 19.8mm/170g
Case	Aluminum/Plastic
File Transfer Speed	Max. 120 Mbps
Signal to Noise Ratio	90dB with 20KHz LPF (based on 1KHz 0dB)
Earphone Jack Output Power	7mW/CH (16Ω)
Output Frequency Range	20Hz~20KHz
Temperature Range	-5 ~ +35°C (23 ~ 95F)
FM Frequency	87.50 ~ 108.00 MHz
FM Signal to Noise Ratio	45 dB
FM T.H.D	1%
FM Useable Sensitiivity	10 dB
File Support	MPEG1/2/2.5 Layer 3 (8Kbps ~ 320Kbps, 8KHz ~ 48 KHz) WMA (48Kbps ~ 192Kbps, 8KHz ~ 48KHz)

Memo